



Double Panel WALL SCREEN

OWNER'S GUIDE AND INSTALLATION INSTRUCTIONS DOUBLE PANEL RETRACTABLE WALL SCREEN

Thank you for choosing the LARSON Double Panel Retractable Wall Screen. These instructions describe installation on a large opening patio door. However, the screen can also be installed on various other types of doors, windows, and other openings. For help installing, please contact us or visit **www.LARSONdoors.com**

Please read the complete installation instructions before proceeding.

INSTALLATION TOOLS

Power Screw Driver
Long Phillips Bit
2mm Allen Wrench (Provided)
Tape Measure
Flat Head Screw driver

Square
Pencil
Scissors
Flashlight (Recommended)
Step Ladder (Recommended)

Appropriate Personal Protective Equipment



Installation Questions?
Replacement Parts?



WE CAN ASSIST YOU.
888-483-3768



Double Panel WALL SCREEN

DOOR SCREEN COMPONENTS



- | | |
|-----------------------------------|---------------|
| A Top Guide | (Qty 1 or 2) |
| B Side Guide | (Qty 2) |
| C Bottom Guide | (Qty 2) |
| D Cassette Assembly | (Qty 2) |
| E Stop Block | (Qty 1) |
| F #8 x 3/4" Phillips Screw | (Qty 9 or 12) |

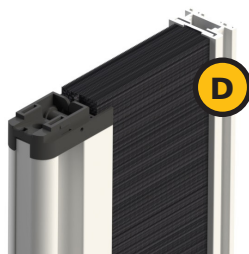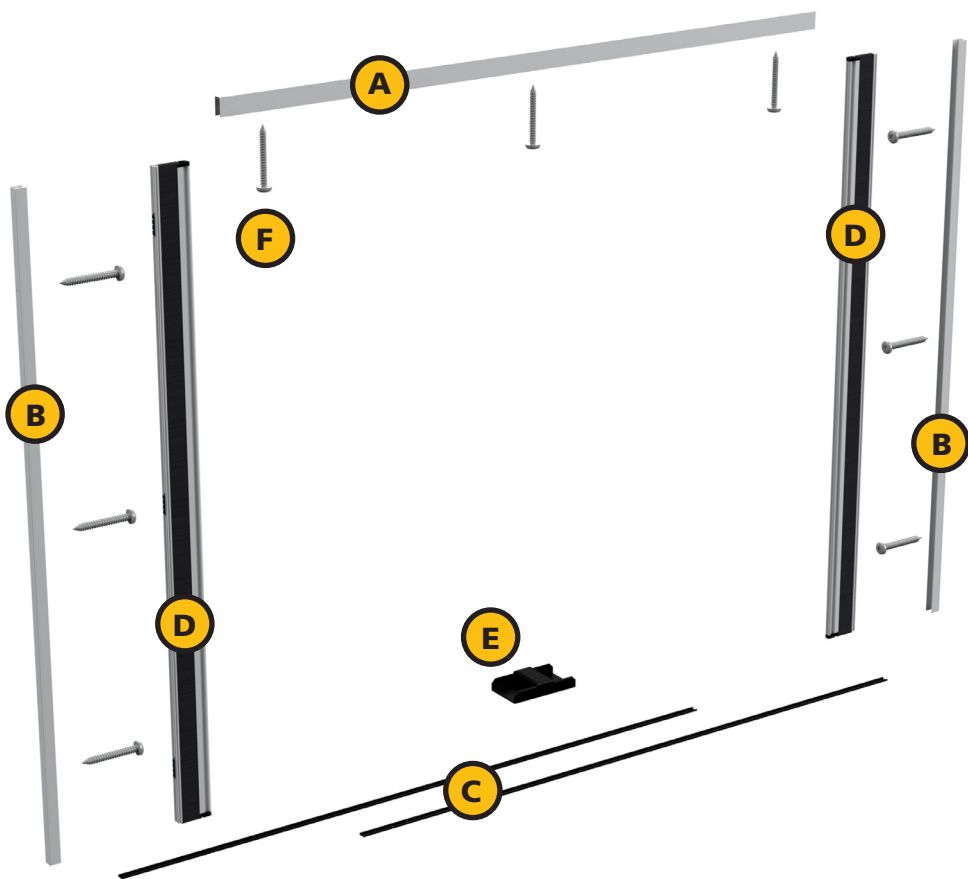

BEFORE YOU START

Ensure the opening is plumb, level, square, and the bottom sill has a flat, stable, and smooth mounting surface. A minimum depth of 1 1/4" is required.

Make a mark at the center of your opening on the top jamb and the bottom sill.

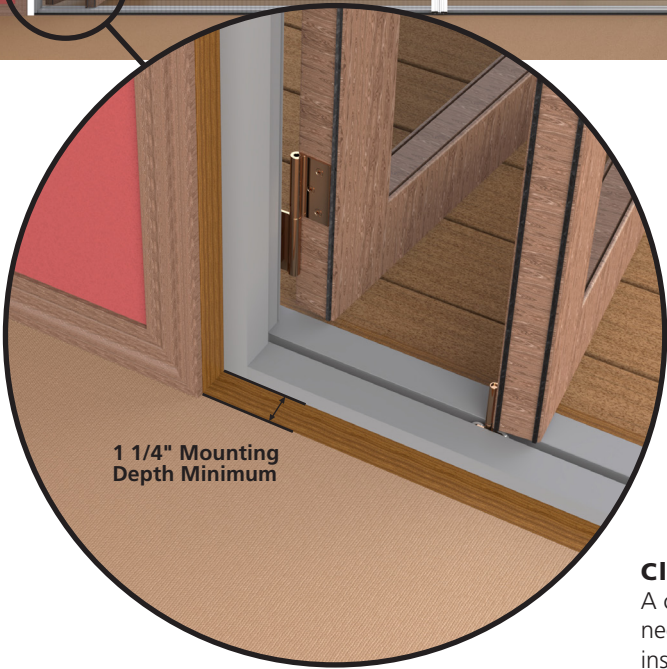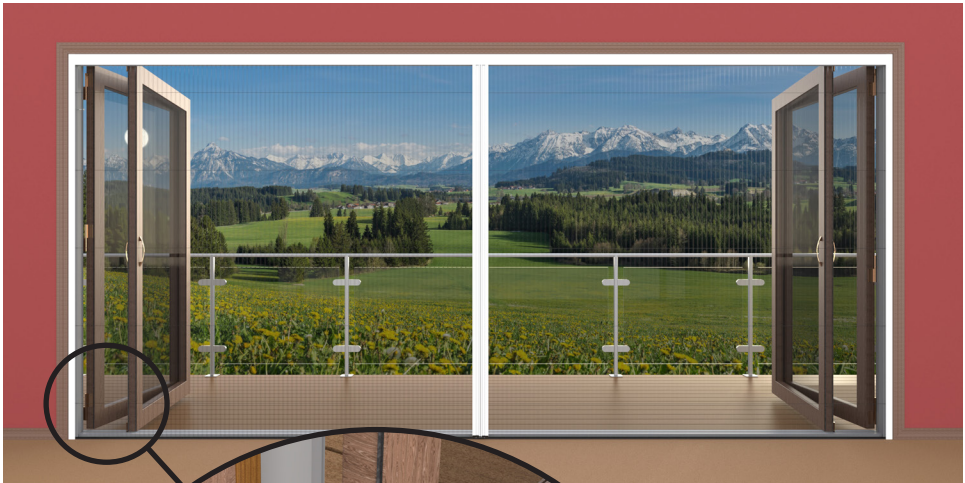


Clean the threshold

A clean, flat surface is necessary for proper installation.

1 INSTALL SIDE GUIDES

Place one of the Side Guides against the jamb in the opening and slide to the top. Secure the Side Guide with the provided screws through the pre-punched holes. Repeat for the opposite side of the opening.

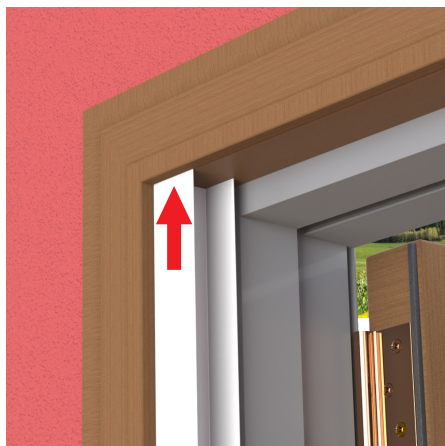


2 INSTALL TOP GUIDE(S)

One Top Guide: Insert the ends of the Top Guide into the Side Guides and slide to the top of the opening. Center the Top Guide and secure using the provided screws through the pre-punched holes.


Two Top Guides: Position a Top Guide so the notches on the inside are toward the center of the opening. Insert the left end of the Top Guide into the left Side Guide and align the right end to the center mark of the opening. Secure the Top Guide with the provided screws through the pre-punched holes. Next, position the other Top Guide so the notches on the inside are towards the center of the opening. Insert the right end of the Top Guide into the right Side Guide and align the left end to the center mark of the opening. Ensure the Top Guides meet at the center and are flush, then secure with the provided screws through the pre-punched holes.



Top Guide
Notch towards
Center of
Opening
(2 Top Guides
only)

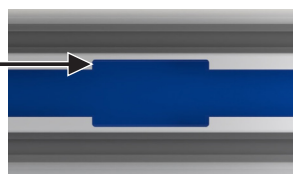

Center of
Opening Mark
(2 Top Guides
only)


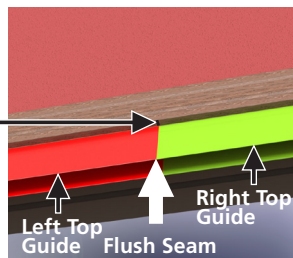


3 INSTALL STOP BLOCK AND BOTTOM GUIDES

Ensure you have a clean, flat mounting surface at the bottom of your opening. Center the Stop Block on the center of opening mark and position so it's in-line with the Top Guide then remove the paper backing and secure.

Attention! The adhesive underneath the Bottom Guide is very sticky and cannot be moved once it is applied.

With the Stop Block in position, peel the paper backing from one of the Bottom Guides, and press one end into the Stop Block. Align the Bottom Guide so the other end of the Bottom Guide ends inside the Side Guide. Firmly press down to secure in the opening, slowly moving from one end to the other. Repeat with the other Bottom Guide.

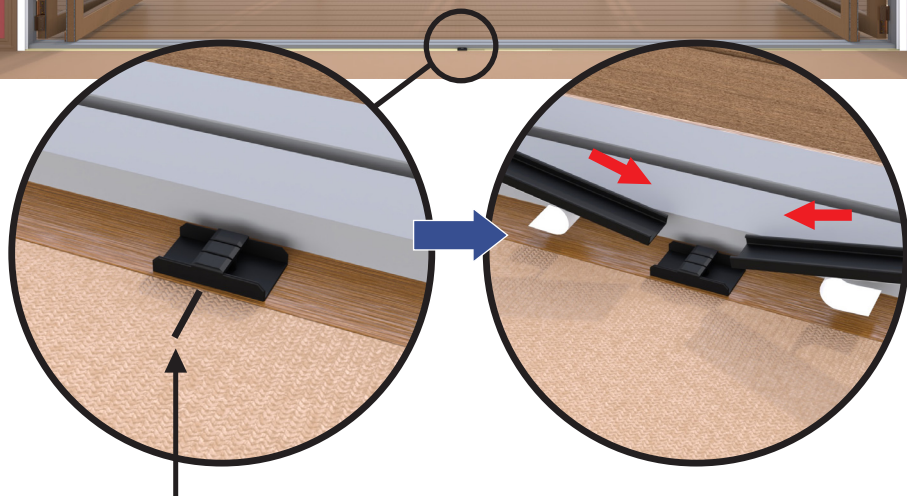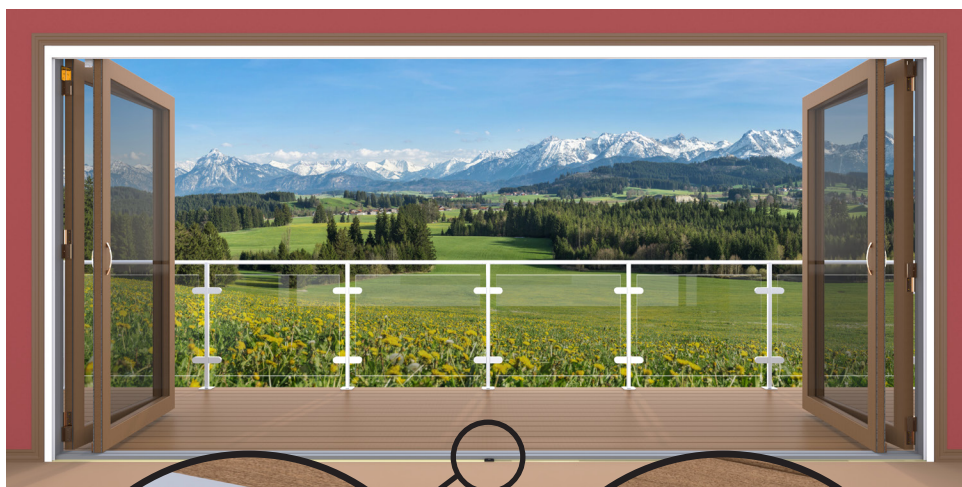


Center of
Opening Mark

4 INSTALL CASSETTE ASSEMBLIES

Place one of the Cassette Assemblies into one of the Side Guides with the Upside label at the top of the opening. DO NOT cut the wrap at this time. Ensure the mounting clips are evenly spaced and the cords come out of the top end of the Cassette Assembly. Snap the Cassette Assembly into the Side Guide at the bottom, middle, and top. Repeat for the opposite side.


Note: The number and color of cords may vary.

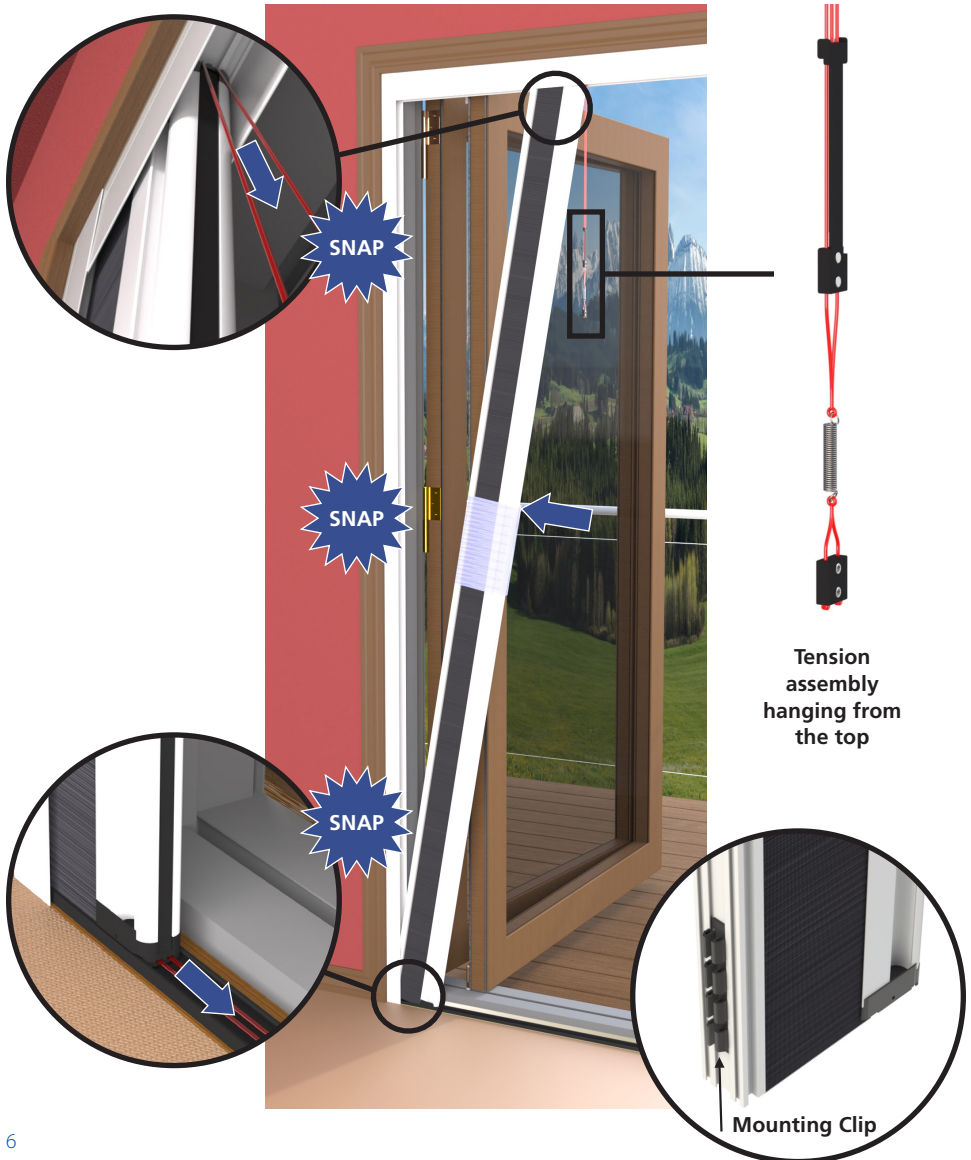

5 SECURE LOWER CORDS


Insert the knot of the bottom cords into the slot of the Stop Block. Remove the slack in the bottom cords by pulling on the top cords. Repeat for the other side.

Note: The number and color of cords may vary.

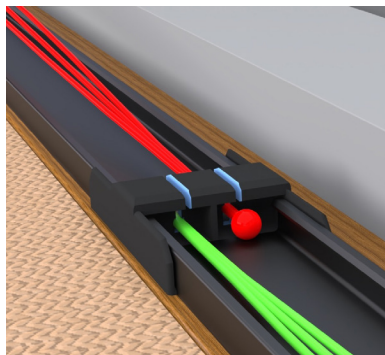


6 INSERT CORD TENSIONER

Locate the Cord Tensioner from the left Cassette Assembly as viewed from the inside. Slide it into the notch of the Top Guide closest to the Left Cassette Assembly and push towards the cassette until clear of the notch. Ensure the set screws are facing down.

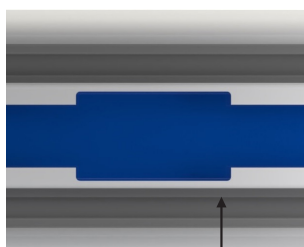


Top Guide Notch

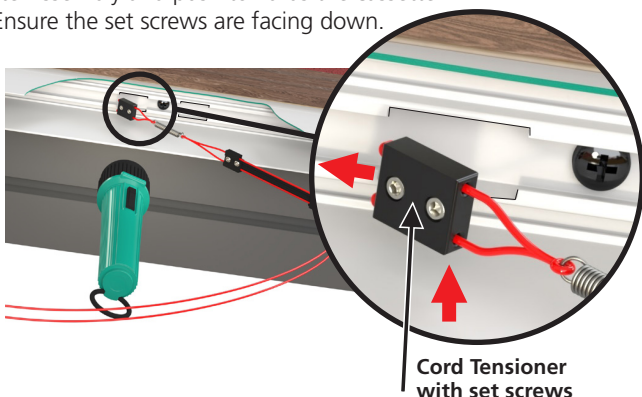

Cord Tensioner with set screws

7 INSERT CORD CARRIER

Insert the section of the Cord Carrier from the Left Cassette Assembly into notch of Top Guide that is 2nd closest to the Left Cassette and slide towards the center of the opening.

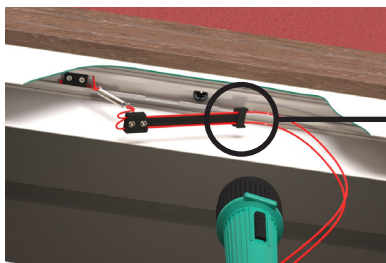



Cord carrier with set screws



8 Repeat steps 6 and 7 for right side except with all directions and orientations reversed. Ensure there are no tangles, snares, or pinched cords anywhere.

9 CENTER AND SECURE CORD CARRIERS

Locate the center of opening on the Top. Move both Cord Carriers so they meet at this location and are lightly touching. Note the draping cords. Secure the Cord Carrier with the provided 2mm Allen wrench.


Note: There will still be slack in the cords.

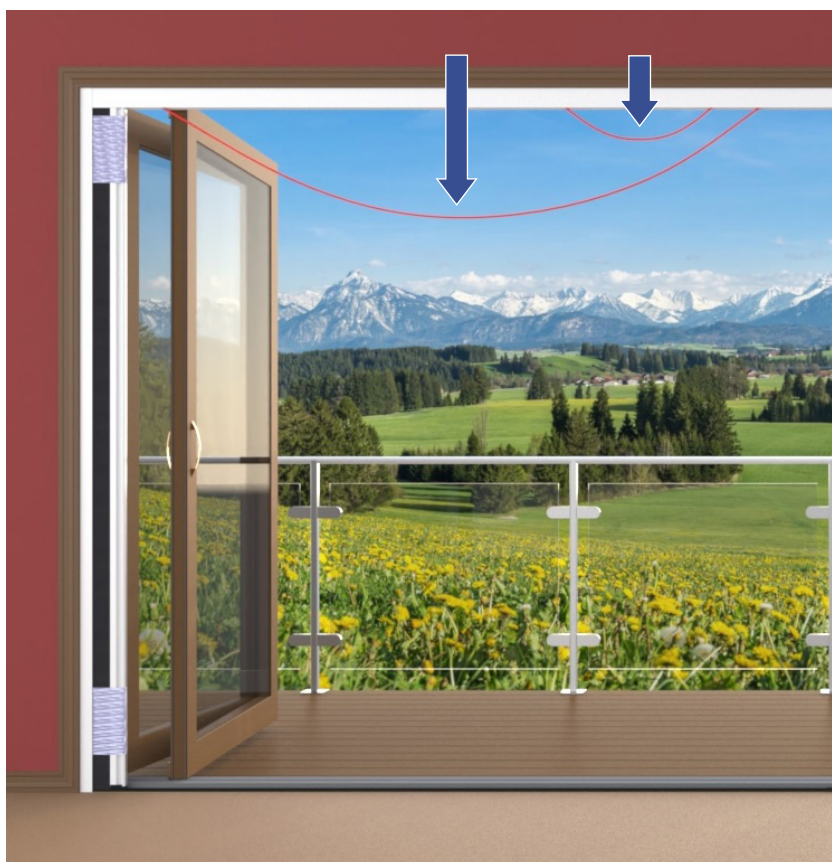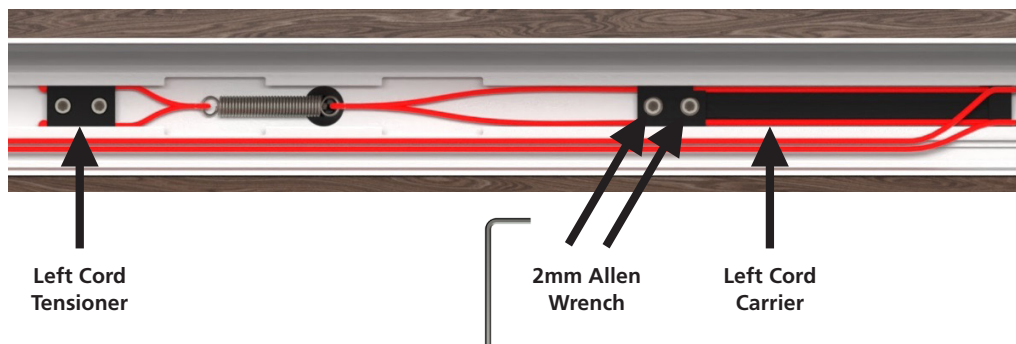

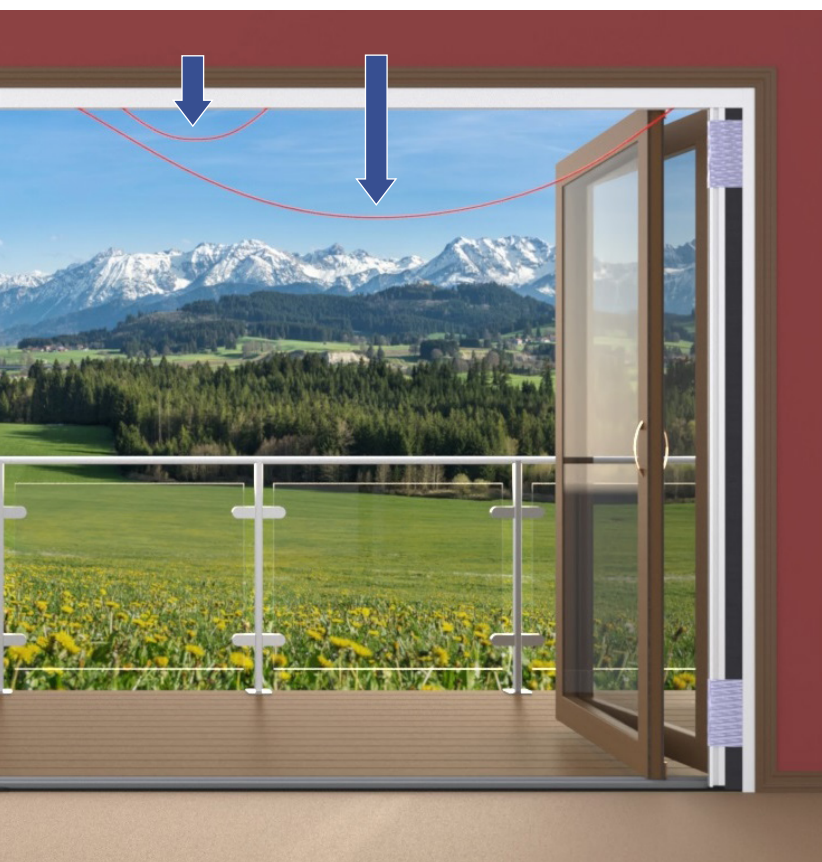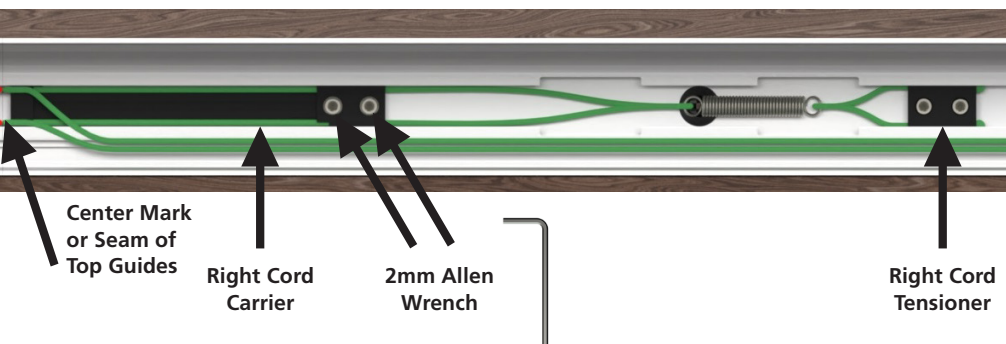

10 APPLY TENSION TO CORD TENSIONER AND SECURE

Using a screwdriver, push the Left Cord Tensioner towards the Left Cassette Assembly until there is slight tension. There should no longer be any slack in the cords. Secure both set screws with the provided 2mm Allen wrench. Repeat for the other Cord Tensioner.

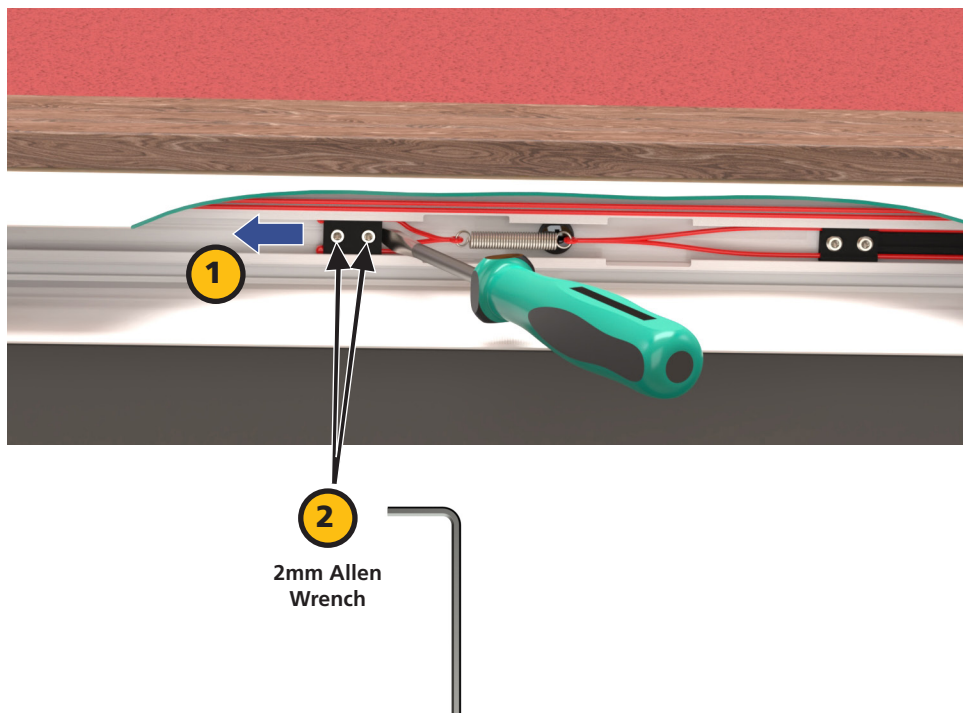

11 FINISHING DETAILS

Cut and remove the wrapping on the Cassette Assembly. Test operation and separate pleats with fingers as necessary. Refer to the Troubleshooting Guide if the operation is not satisfactory.

TROUBLESHOOTING GUIDE

PROBLEM:

One of the cords is longer or shorter than the others.

The cords sag into the opening when operating the Screen.

One of the screens doesn't close all the way.

There is a gap where the two Top Guides come together and light is visible through it.

There is a gap between the two pull bars where the magnets meet.

SOLUTION:

- A. Ensure there are no snags, tangles, or pinched cords. Thoroughly inspect the Top Guide and the slot. If there are none, verify there is sufficient tension.
- B. Loosen the two screws in the cord tensioner on the side of the assembly with the uneven cords (step 10 backwards).
- C. With slack in the cords, pull out the knotted end from the Stop Block (step 5 backwards).
- D. Cut off the knot and pull all the cords until they're equal length then re-tie the knot using a square knot and trim the extra cord. Be sure not to trim more than 6".
- E. Secure the knot and position the Cord Tensioner again (Step 5 and 10).

Try increasing the tension on the corresponding cord tensioner and verify one or more of the cords is not longer than the others. If so, see "one of the cords is longer or shorter than the others."

Verify there are no snags in the cords, particularly at the top and bottom of the Cassette Assembly, and be sure there are no pinched cords in and around the notch and track of the Top Guide(s).

Place a piece of tape on the inside of the Top Guide, along the joint to block the light.

- 1. Verify that both of the plastic top Cord Carriers are butted tight together at the center-point inside of the Top Guide (see page 7). Loosen the Cord Carrier and Cord Lock and adjust as needed.
- 2. Verify that where these plastic top Cord Carriers are butted together at exactly the same center point/distance as the center point of the bottom guide plastic Stop Block. If the bottom and top are not positioned exactly in alignment then loosen all of the top adjustments and do this.
- 3. Look to see if any of the cables in the top guide are just a little looser than any others? If so then you will need to loosen the corresponding Cord Carrier and Cord Tensioner, untie the knot that comes through the Cord Carrier and ties to the spring, carefully remove any excess slack in one or more of the cables and then retie the knot. Reinstall the Cord Tensioner and Cord Carrier and adjust.

WARRANTY

RETRACTABLE SCREEN WARRANTY LARSON MANUFACTURING COMPANY RETRACTABLE SCREEN LIMITED FIVE YEAR WARRANTY

The five year limited warranty applies to the original purchaser of owner occupied homes and covers mechanical components excluding screen fabrics. LARSON warrants the cassette, mounting rails and latch to be free from defects in manufacturing, materials, paint adhesion or workmanship, under normal use, for the period stated above.

Fading is only covered by this warranty during the first year. In order to obtain performance under this limited warranty, the original owner shall notify LARSON with proof of purchase. The obligations of this warranty will be completed within ninety (90) days after notice of a defect or malfunction has been furnished directly to LARSON.

The following are limitations and exclusions from the warranty:

- If usage, adaptation, or installation are not in accordance with LARSON installation and operation instructions.
- If the products have been used to perform functions they were not designed to perform.
- Damage due to acts of nature, abuse, or misuse.
- Damage including tears to the screen are not covered under warranty.
- Acts of nature including wind damage and flooding are not covered under warranty.
- Damages resulting from improper installation or misuse are not covered under the warranty.
- Labor cost, reinstallation fees are not covered under warranty.
- Water damage due to lack of rain diversion or structural overhang is not covered under warranty.
- Certain coastal applications, chemicals or airborne pollutants such as salt or acid rain are not covered under warranty.
- Your exclusive remedy is limited to the repair and replacement of the defective product.

Upon receipt of goods ordered, please examine for proper models, size, and colors. LARSON will replace products if a manufacturing or shipment error is made.

FOR WARRANTY ASSISTANCE PLEASE CALL:

1-888-483-3768

The following information is necessary to process your warranty:

1. Registration Number
2. Proof of Purchase

Larson Retractable Screens provide insect protection and support fresh, natural ventilation in low-wind conditions. Unlike 4-sided rigid framed screens, Larson Retractable Screens move in and out of a protective cassette and the exposed surface area and edges of the fabric are flexible. Consequently, the wind speed that a retractable screen can withstand (e.g. before the edges of the screen fabric may push out of the guide rails), will depend on the width and height of the opening, the openness factor of the specific screen fabric and, other design factors of the model. Retractable screens are not to be kept open or continually exposed to wind, sun, rain or other harsh conditions. Please be sure to use your retractable screen only during low-wind conditions.